

# SCREEN EZE

The Screen System That's A Snap!

## 1. Identify the SCREENEZE™ Parts.




a. Aluminum Base Channel



b. Vinyl Cap

## 2. Determine the type of application and framing requirements. Architectural specs are available on our website [www.screeneze.com](http://www.screeneze.com) or by contacting our office.

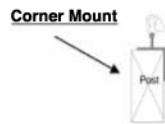


Corner Mount



Flush Mount

## 3. After determining the application, snap the Vinyl Cap onto the Aluminum Base Channel. You will cut both pieces as one. Tip: The beveled edge will always face toward the screen opening.



Corner Mount



Flush Mount

## 4. Measure the opening and cut as required. Be sure Vinyl Cap does not move on the Aluminum Base Channel while making miter cuts. Tip: Never force ScreenEze™ into an opening. For best results, make cuts snug or short by a 1/32" – 1/16" to allow for expansion and contraction.

## 5. Find the center of each cut piece. Then mark for screw location at 10" – 12" O.C. from and including the center mark. Always place a screw at 2" from either end of cut piece. Adjust your centers to the 2" distance from the end of the cut piece. Tip: Pre-punch or drill a 3/16" hole at your marks. Place cut pieces in opening and check for fit. Look for true corners. Adjust if required.

## 6. Secure Aluminum Base Channel to the framing with ScreenEzetm screws (#2 phillips – self-tapping #11 x 1 ¼ inch).

## 7. Remove Vinyl Cap from Aluminum Base Channel. A 5 in 1 tool, a miniature "Wonder Bar", or a small straight screwdriver may be used. Be careful not to scar the Aluminum Base Channel or Vinyl Cap during this process. Be careful not to mix-up sides or top and bottom as they might be different lengths. Tip: Pencil identifying marks on the corresponding cut Vinyl Cap and its Aluminum Base Channel so they are easily kept together when completing step 8.

## 8. To install screen, hold fabric to the top of the opening (square fabric on opening). Then, attach screen to Aluminum Base Channel by pressing or tapping the Vinyl Cap into the corners. Secure the first 2"- 3" of your corner by seating the Vinyl Cap to the Aluminum Base Channel with a rubber hammer. Then proceed to the center. Check screen fabric for square and tap the screen at the center point seating the Vinyl Cap completely. Complete Vinyl Cap installation by tapping from the center out towards the corners. Be sure the Vinyl Cap is tight against the Aluminum Base Channel before continuing.

## 9. Install the Vinyl Cap for the bottom of the opening in the same manner used in step 8. Tip: Do not stretch the screen fabric. ScreenEze™ will uniformly stretch the screen fabric for you. Let screen drape over bottom channel and position screen so there are no wrinkles left or right. If it's a windy day place a thumb tack on each corner. Secure Vinyl Cap as described in step 8.

## 10. Install side pieces as described in step 8. Check the entire installation ensuring that the Vinyl Cap is completely seated on the Aluminum Base Channel. Use a razor knife to cut away excess screen fabric. Tip: Use the base of the Vinyl Cap, holding your knife at a perpendicular angle, as a guide for trimming the screen.